FURUNO

**FISH FINDER** 

Alarm Icons

Mode

**English** 

# **FCV-627**

## Operator's Guide

The purpose of this guide is to provide the basic operation for this equipment. For more detailed information, see the Operator's

All brand and product names are trademarks, registered trademarks or service marks of their respective holders.

## Gain Setting

**G**: **0.0** - **10** (Auto Gain: Off) **G:AF** (Auto Gain: Fishing) **G:AC** (Auto Gain: Cruising)

#### : Multiple alarms : Voltage alarm (High) : Voltage alarm (Low) :Speed alarm Picture Display

: Arrival Alarm

#### How to choose a range (NA: When bottom discrimination function is used) ◀ Auto Manual ▶ Range will be changed [Auto] automatically MEDIC Select a [Manual] ▲/▼ : Select [ENTER]: Set [MENU] : Cancel Range Mode Manually select a range

## Range Setting

AUTO R (Auto Range) MAN R (Manual Range)

### How to select a display mode



From left,

NAV1: Navigation 1

ZOOM: Low freq. zoom display mode (BL-LF, BZ-LF, MZ-LF)


LF: Low freq. single display mode (LF)

DUAL: Low/High freq. dual display mode (LF/HF) HF: High freq. single display mode (HF)

ZOOM: High freq. zoom display mode


(BL-HF, BZ-HF, MZ-HF)

NAV2: Navigation 2

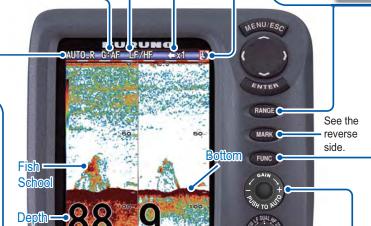

advance speed



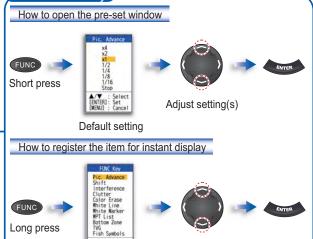

## How to adjust the brilliance









Press ◀ or ▶ to adjust brilliance.

## How to adjust the gain





[Fishing] [Cruising]





Choose item from list

Adjust gain manually

Short press

(Long press: Turn off the power)

Press the

